




www.gough.com.au/trackpad

> TIPS & TRICKS

Creating a curve :

1. By using a crow bar you are able to lever the panels around to create the desired curve

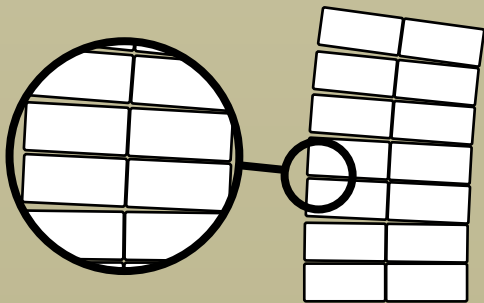

Sweeping Curve (Joint Flexibility)



2. Turn pins sideways for easier installation. The pins have two flat sides on them which are the same width as the slot in the plates.

3. Fold plates back to drop next panel into place



4. Always keep an eye on the direction the panels are going. Be careful not to veer off course.

5. When backfilling try to put 100mm of soil over the top. This will allow for settling and compression as first lot of traffic uses the road.

6. Only use rubber mallets or lump hammers to install pins. Do not use steel claw hammers or similar. These will crack and damage the pins.

7. Pre-loading the panels with pins and plates prior to going to site can save a lot of time on installation. Be aware when pre-loading you will need the right hand sides.